

TECHNICAL SHEET


Electromagnet with door status sensor, force 180 kg



- Model: EM-180-S
- Traction force: 180 kg
- Working voltage: 12 VDC/300mA | 24 VDC/160mA
- With door status sensor
- Personal safety: Opens with lack of voltage
- Anodized aluminum case
- Zinc-plated steel magnets
- Zinc-plated steel plate
- Size: 170x41x22.5 mm

EM-180-S

Dimensions

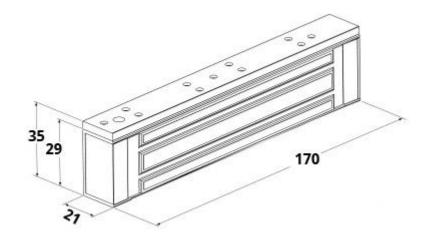








Triplo W


Installation

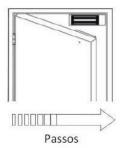

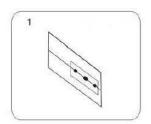


Escantilhão

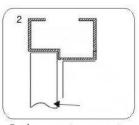

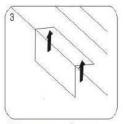


Feche a porta, encoste o escantilhão no aro

 
Marque os furos no Aro e na porta



Fure com a broca adequada

 

Instale a contraplaca na folha da porta

 


Metálica oca Furo int. 8mm Furo ext. 16 mm




Madeira Furo int. 8mm Furo ext. 13 mm



 
6.8mm for M8-1.25 thread Chapeada Furo int. 8mm




Coloque os pinos na contra-placa

 

 
Coloque as anilhas na contra-placa de acordo com o desenho




Coloque as anilhas entre a contra-placa e a porta

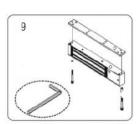

 
Use a chave sextavada para remover a placa de montagem



 
Passe o cabo pelo furo e aperte a placa no aro



Aperte o corpo da fechadura à placa

 

 Feche e puxe a porta para testar a força de tracção



Reaperte os parafusos de fixação

 






Installation of squares


L-square





When the door frame is less than 42 mm wide or the door opens outwards, it is necessary to install the L bracket.

 
Square in ZL






When the door opens inwards, it is necessary to install the ZL square

  
U-square






For tempered glass doors 10 to 15 mm thick, it is necessary to use the U-shaped sleeve


Installation instructions

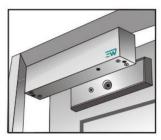




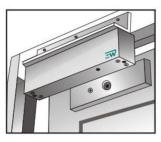

Esquadro L

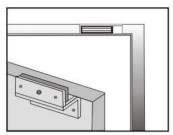

Esquadro ZL

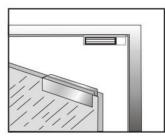

Esquadro U (vidro)







Electrical diagram



