



DATA SHEET


Hidden RFID Lock for Lockers



TW103

- Model: TW103
- Capacity for 13 user cards and 1 management card (master one).
- Operating mode:
 - 1 Mifare 13,56MHz card – opening by using authorized card
 - 2 Mifare 13,56MHz cards – use of two authorized cards in order to unlock
- Power supply: 4 AAA alkaline batteries.
- Battery life:
 - Low battery alarm – Long beep before any opening
- Allowed operating temperature: -20 °C to 60 °C
- Size:
 - Lock: - 75 x 75 x 30 mm
 - Armature plate with piston: 70 x 24 x 16 mm
- For 15 mm – 25 mm thick doors.

Dimension

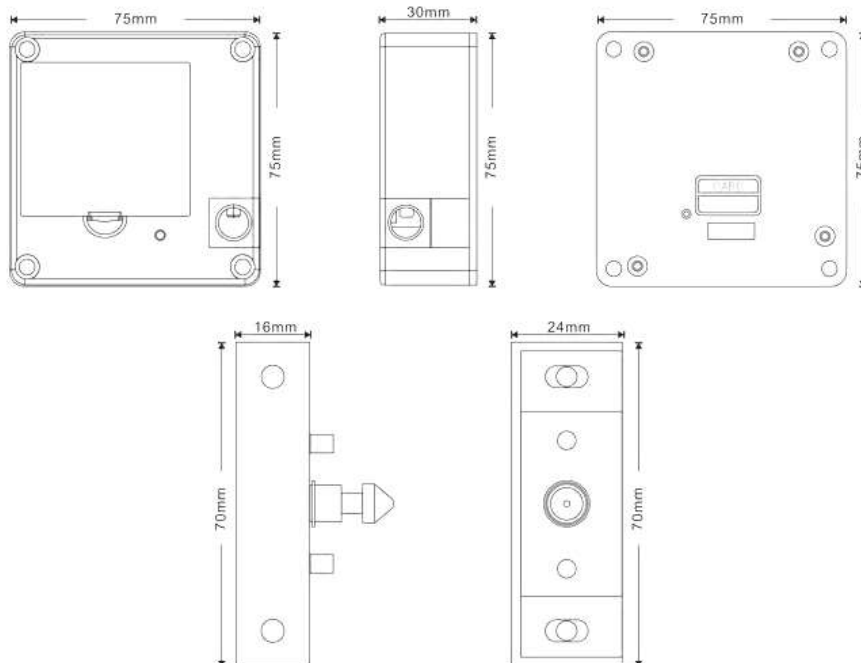

Setting and Operating Mode

Operating modes:

- Opening by one card
- Opening by two cards


Press once the back button to change operating modes after the resetting and to add the user and master cards. User cards will have to be added again after every operating mode change.

1. Opening mode by using one user card



1. Press RESET for 1 second using a slim key.
2. Stop pressing after 1 beep.
3. The lock will open and there will be 1 beep every second until is off.
4. The first card used will be the master card (1 beep).

2. Opening mode by using two user cards

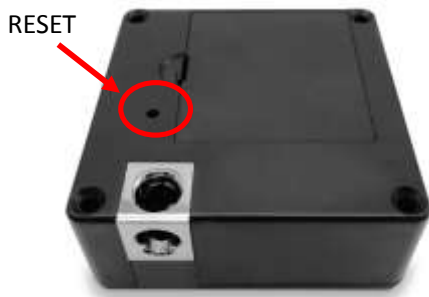

1. Press for 1 second using a slim key.
2. There will be 1 beep and thereafter, 2 beeps, stop pressing the button afterwards.
3. The lock will open and there will be 1 beep every second until is off.
4. The first card used will be the master card (1 beep).





Add user cards

First setting	After resetting, the first card used will be the master card.
Add user cards	<ol style="list-style-type: none"> 1. Pass master card (there is 1 beep and the lock opens). 2. Pass every card to be added (it can be added up to 13 cards). 3. Pass master card to finish (there will be 3 beeps and the lock closes).
Open lock	Pass the card already added.
Delete all cards	Reset the lock.

Regular problems and solutions

Problem	Cause	Solution
The user card is used but lock does not open	Incorrect operating mode. The lock might be set in the two-card opening mode.	Press the back button once. There will be 1 short beep. Add user cards again.
Door is always open	Power failure	Lock opens automatically when the battery is over, and stays this way until battery is replaced.
Lock sounds 1 beep before opening	Low batteries	Alert signal to change battery.

Warranty

Every product marketed by Triplo W Lda., have a two-year warranty for manufacturing defects. Every equipment sold is checked at our facilities for defects; and if it is unreparable, it shall be replaced with a new product, according to the corresponding warranty.

For additional information check our conditions of sale at:
<http://www.triplow.pt/loja/termos-e-condicoes>

