

ANTI PANIC BAR

INSTRUCTIONS FOR DOUBLE DOORS


1. NAME OF THE PARTS

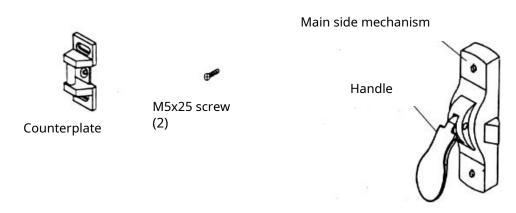

2. TYPE OF INSTALLATION

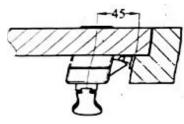


Left-hand opening installation

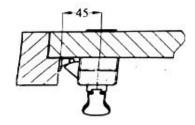


Right-hand opening installation

3. INSTALLATION


- I. Mark the center line as shown in image 1.
- II. Stick the adhesive sheets "A" and "B" on the door frame, aligned with the center line as shown in image 2. Mark and drill the holes for assembly according to the adhesive sheets.

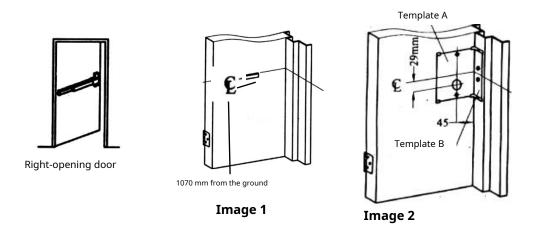

3.1. Cylinder installation.

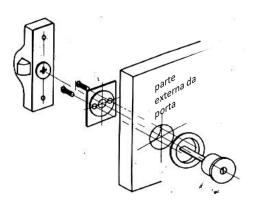


- I. Insert the cylinder into the door hole.
- II. Keep the piece horizontally.
- III. Adjust the screws.



- 3.2. Installation of side mechanisms.
- I. Align the screw holes on the main side mechanism with the holes on the door, then screw them in.
- II. Install the push bar on the main mechanism and the auxiliary mechanism. If the door width is smaller than the length of the bar, cut one end of the bar to fit the door size.



III. Adjust the screws on the auxiliary mechanism.

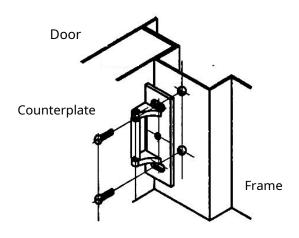

- 3.3. Installing the counter plate: Align the screw holes in the counter plate with the holes in the door and screw in.
- 3.4. Bar test.

When pushing or pressing the bar, the latches should can easily be collected.